

# BODYSPA RV

## EASY INSTALLATION INSTRUCTIONS

### STEP 1

Remove your existing shower head. To remove, turn the existing shower head in a counterclockwise direction.



### STEP 2

Remove any remnants of old plumber's tape and flush out shower pipe for 5 to 10 seconds.




### STEP 3

Wrap plumber's tape clockwise 3 or 4 turns around threaded end of shower arm.




### STEP 4

In a clockwise direction, screw end of hose to the taped portion of the shower arm. Hand tighten only.

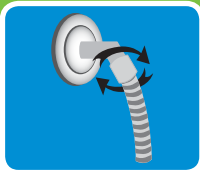


### STEP 5

Attach wide end of SmartPause® valve to base of the handheld shower and hand tighten. Attach hose to opposite end of the SmartPause® valve.

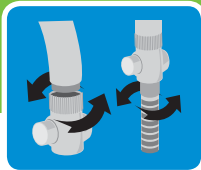

### STEP 6

Attach double stick tape provided to back of holder and press firmly to clean, dry shower wall. Place your new handheld shower head into holder.

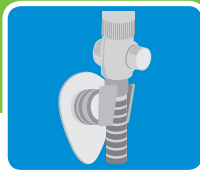

NO TOOLS NEEDED

# STOP! NEED HELP?

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

If you need installation assistance, replacement parts or have questions regarding our warranty please contact customer service at


**1.866.440.9257**

or **1.775.420.5600**

Support is also available via email at [support@oxygenics.com](mailto:support@oxygenics.com)

Be sure to visit our website at [www.oxygenics.com](http://www.oxygenics.com)

Business Hours:  
Monday-Thursday 7:00 am to 5:00 pm PST  
Friday 7:00 am to 4:30 pm PST

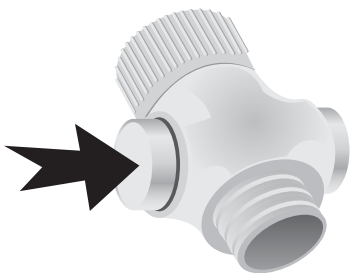

### USING THE SMARTPAUSE VALVE

Located at the base of the BodySpa® wand, the SmartPause® valve allows you to pause your shower while you lather up.

To pause the shower spray: Gently push the button on the SmartPause® valve from left to right to pause the shower's flow. To resume flow, simply push button back to the left.



# BODYSPA RV

## INSTRUCCIONES PARA LA INSTALACIÓN FÁCIL

### PASO 1

Quite su cabezal de ducha existente. Para la extracción, gire el cabezal de ducha existente en el sentido contrario a las agujas del reloj.



### PASO 2

Quite cualquier remanente de vieja cinta de plomería y enjuague el caño de la ducha durante 5 a 10 segundos.




### PASO 3

Envuelva con cinta de plomero en el sentido de las agujas del reloj con 3 o 4 vueltas alrededor del brazo de ducha.




### PASO 4

En el sentido de las agujas del reloj, ajuste el extremo acanalado de la manguera a la parte encintada del brazo de ducha. Ajuste sólo con la mano.

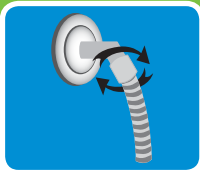


### PASO 5

Conecte el extremo ancho de la válvula SmartPause® a la base de la ducha de mano y ajuste con la mano. Conecte el extremo liso de la manguera al extremo opuesto de la válvula SmartPause®.

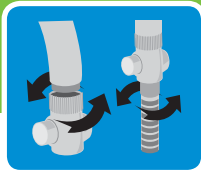

### PASO 6

Adhiera la cinta de doble faz suministrada a la parte trasera del sostén y presione firmemente a la pared limpia y seca de la ducha. Coloque su cabezal de ducha de mano en el sostén.

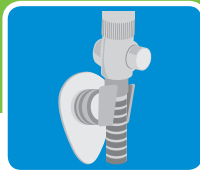

NO SE NECESITA HERRAMIENTAS

## ¡DETÉNGASE! ¿NECESITA AYUDA?

NO DEVUELVA ESTE PRODUCTO A LA TIENDA.

Si necesita asistencia de instalación, partes de repuesto o si tiene preguntas sobre su garantía, contacte a atención al cliente al


**1.866.440.9257** o al  
**1.775.420.5600**

También existe soporte disponible vía correo electrónico al [support@oxygenics.com](mailto:support@oxygenics.com)

Asegúrese de visitar nuestro sitio web en [oxygenics.com](http://oxygenics.com)

Horario de atención:

De lunes a jueves de 7:00 am a 5:00 pm PST  
Viernes de 7:00 am a 4:30 pm PST

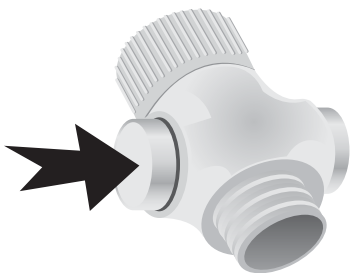

### CÓMO USAR LA VÁLVULA SMARTPAUSE

Ubicada en la base de la vara de BodySpa®, la válvula SmartPause® le permite pausar su ducha mientras se enjabona. Para pausar el rocío de la ducha: Presione suavemente el botón en la válvula SmartPause® de izquierda a derecha para pausar el flujo de la ducha. Para reanudar el flujo, simplemente presione el botón nuevamente hacia la izquierda.