


SPIN + ADVANTAGE

EASY INSTALLATION INSTRUCTIONS

STEP 1

Remove your existing shower head. To remove, turn the existing shower head in a counterclockwise direction.

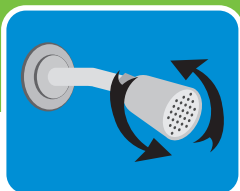


STEP 2

Remove any remnants of old plumber's tape and flush out shower pipe for 5 to 10 seconds.




STEP 3

Wrap plumber's tape clockwise 3 or 4 turns around threaded end of shower arm.

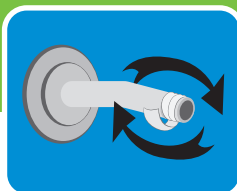


STEP 4

In a clockwise direction, screw Spin onto the taped portion of shower arm. Hand tighten only.

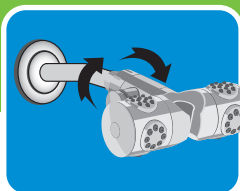


STEP 5

Attach end of hose to Spin and hand tighten.

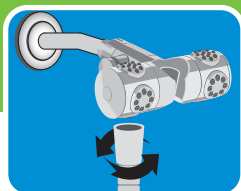

STEP 6

Attach other end of hose to base of handheld and hand tighten. Insert your new handheld shower in Spin.

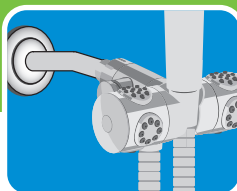


ATTENTION:

WASHERS PRE-INSTALLED IN HOSE ENDS

Washers must be inserted into both hose ends for proper installation.

EASY TWIST SPRAY SELECTION

Enjoying multiple spray patterns during your shower has never been easier. Each SpinJet can be rotated independently for custom spray combinations. Press button located on side of Spin to pause the flow of water to the holder.

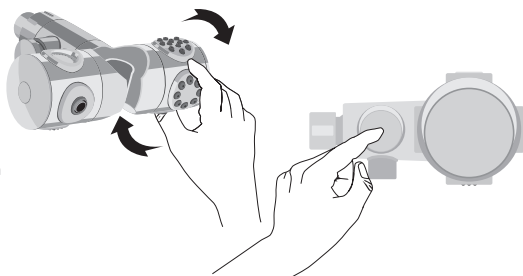

**NO TOOLS
NEEDED**



STOP! NEED HELP?

**PLEASE DO NOT RETURN THIS
PRODUCT TO THE STORE.**

If you need installation assistance, replacement parts or have questions regarding our warranty, our Customer Service team can be contacted by:

PHONE:

1-866-440-9257
or **775-420-5600**

LIVE CHAT:

www.oxygenics.com

EMAIL:

support@oxygenics.com

ONLINE:

www.oxygenics.com/claims

Business hours:

Monday - Thursday 7:00 am to 5:00 pm PST
Friday 7:00 am to 4:30 pm PST*

*Closed on all nationally observed holidays




For use with automatic
compensating valves
rated at 1.35 GPM
(5.11 L/min) or less.

SPIN + ADVANTAGE

INSTRUCCIONES PARA LA INSTALACIÓN FÁCIL

PASO 1

Quite su cabezal de ducha existente. Para la extracción, gire el cabezal de ducha existente en el sentido contrario a las agujas del reloj.

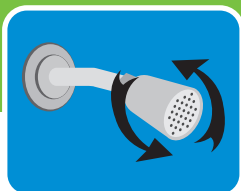


PASO 2

Quite cualquier remanente de vieja cinta de plomería y enjuague el caño de la ducha durante 5 a 10 segundos.




PASO 3

Envuelva con cinta de plomero en el sentido de las agujas del reloj con 3 o 4 vueltas alrededor del brazo de ducha.

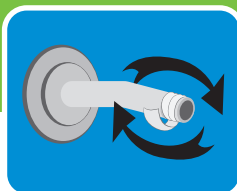


STEP 4

En la dirección de las agujas del reloj, enrosque Spin a la porción encimada del brazo de la ducha. Solo ajuste a mano.

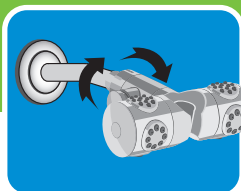


STEP 5

Fije el extremo de la manguera al Spin y ajuste a mano.

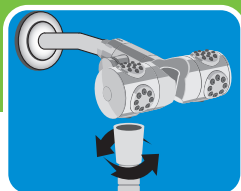

STEP 6

Fije el extremo de la manguera a la ducha portátil y ajuste a mano. Ponga la nueva ducha portátil en Spin.

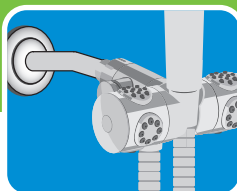

**NO SE NECESITA
HERRAMIENTAS**



¡DETÉNGASE! ¿NECESITAS AYUDA?

**NO DEVUELVA ESTE PRODUCTO
A LA TIENDA.**

Si necesita asistencia de instalación, partes de repuesto o si tiene preguntas sobre su garantía, contacte a atención al cliente al

TELÉFONO:

1-866-440-9257
o al **775-420-5600**

CHAT EN VIVO:

www.oxygenics.com

CORREO ELECTRÓNICO:

support@oxygenics.com

EN LÍNEA:

www.oxygenics.com/claims

Horario de atención:

De lunes a jueves de 7:00 am a 5:00 pm PST

Viernes de 7:00 am a 4:30 pm PST *


* Cerrado en todos los días festivos observados a nivel nacional

ATENCIÓN: LAS JUNTAS ESTAN PRE-INSTALADO EN EL EXTREMO DE LA MANGUERA

Las juntas tiene que insertarse a los dos extremos de la manguera para funcionar correctamente.

SELECCIÓN DE LLUVIA DE GIRO FÁCIL

Disfrutar de varios patrones de lluvia durante su ducha nunca fue más fácil. Cada SpinJet se puede rotar de forma independiente para combinaciones de pulverización personalizadas. Presione el botón ubicado en el costado del centrifugado para pausar el flujo de agua hacia el soporte.

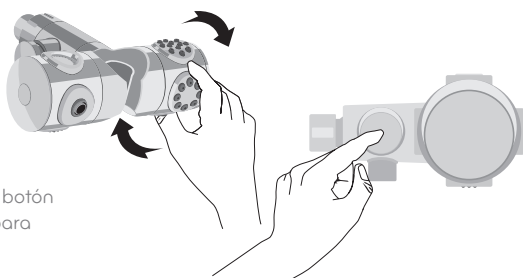

Para el uso con válvulas de compensación automáticas nominal de 1.35 GPM (5.11 L/min) o menos.