
oxygenics®
Pure Shower Genius®

VITALSPRAY




EASY INSTALLATION INSTRUCTIONS


STEP 1
Remove your existing shower head. To remove, turn the existing shower head in a counterclockwise direction.

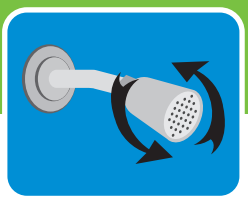


STEP 2
Remove any remnants of old plumber's tape and flush out shower pipe for 5 to 10 seconds.

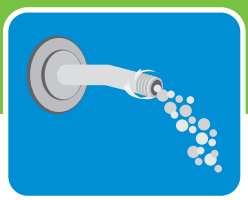

STEP 3
Wrap plumber's tape clockwise 3 or 4 turns around threaded end of shower arm.

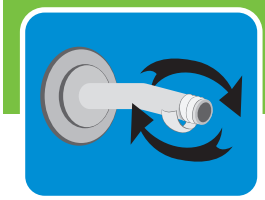

STEP 4
In a clockwise direction, screw end of hose to the taped portion of the shower arm. Hand tighten only.

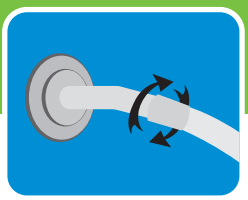

STEP 5
Attach other end of hose to base of handheld and hand tighten.




STEP 6
Attach double stick tape provided to back of holder and press firmly to clean, dry shower wall. Place your new handheld shower head into wall mount.




NO TOOLS NEEDED

FILLING THE VITALSPRAY HAIR AND BODY WASH RESERVOIR


1. Rotate handle in counterclockwise direction until arrows align and pull outward.

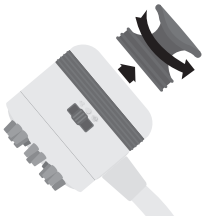

2. Fill VitalSpray reservoir with favorite hair or body wash.

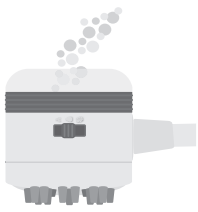

3. Align arrows on handle and reservoir and rotate handle clockwise.

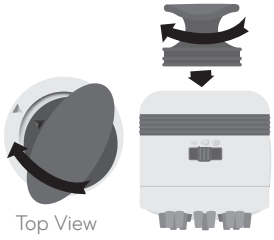

Top View

STOP! NEED HELP?

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

If you need installation assistance, replacement parts or have questions regarding our warranty, our Customer Service team can be contacted by:

PHONE:
1-866-440-9257
or **775-420-5600**

LIVE CHAT:
www.oxygenics.com

EMAIL:
support@oxygenics.com

ONLINE:
www.oxygenics.com/claims

Business hours:
Monday - Thursday 7:00 am to 5:00 pm PST
Friday 7:00 am to 4:30 pm PST*
*Closed on all nationally observed holidays

For use with automatic compensating valves rated at 1.35 GPM (5.11 L/min) or less.


oxygenics®
Pure Shower Genius®

VITALSPRAY




INSTRUCCIONES PARA LA INSTALACIÓN FÁCIL


PASO 1
Quite su cabezal de ducha existente. Para la extracción, gire el cabezal de ducha existente en el sentido contrario a las agujas del reloj.

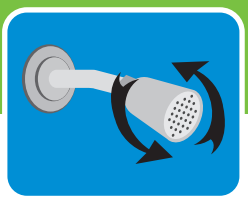

PASO 2
Quite cualquier remanente de vieja cinta de plomería y enjuague el caño de la ducha durante 5 a 10 segundos.

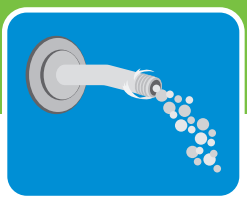


PASO 3
Envuelva con cinta de plomero en el sentido de las agujas del reloj con 3 o 4 vuelvas alrededor del brazo de ducha.

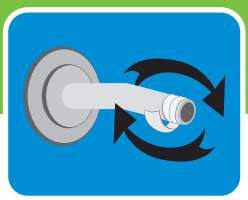


NO SE NECESITA HERRAMIENTAS

PASO 4
En el sentido de las agujas del reloj, ajuste el extremo acanalado de la manguera a la parte encintada del brazo de ducha. Ajuste sólo con la mano.

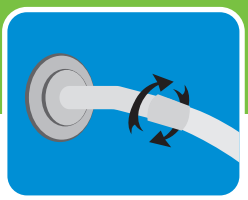

PASO 5
Conecte el otro extremo de la manguera a la base del dispositivo portátil y apriételo con la mano.

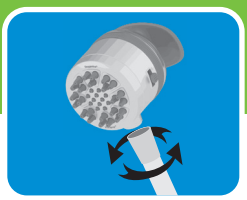


PASO 6
Pegue la cinta adhesiva doble provista en la parte posterior del soporte y presione firmemente sobre una pared de ducha limpia y seca. Coloque su nuevo cabezal de ducha de mano en el soporte de pared.




FILLING THE VITALSPRAY HAIR AND BODY WASH RESERVOIR


1. Gire la manija en sentido contrario a las agujas del reloj hasta que las flechas se alineen y tire hacia afuera.

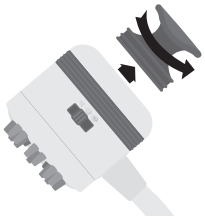

2. Llene el depósito de VitalSpray con su gel de ducha o gel de ducha favorito.

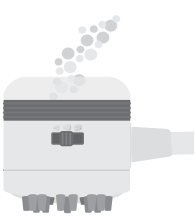

3. Alinee las flechas en el mango y el depósito y gire el mango en el sentido de las agujas del reloj.

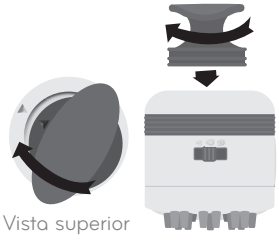

Vista superior

¡DETÉNGASE!
¿NECESITAS AYUDA?

NO DEVUELVA ESTE PRODUCTO A LA TIENDA.

Si necesita asistencia de instalación, partes de repuesto o si tiene preguntas sobre su garantía, contacte a atención al cliente al

TELÉFONO:
1-866-440-9257
o al **775-420-5600**

CHAT EN VIVO:
www.oxygenics.com

CORREO ELECTRÓNICO:
support@oxygenics.com

EN LÍNEA:
www.oxygenics.com/claims

Horario de atención:
De lunes a jueves de 7:00 am a 5:00 pm PST
Viernes de 7:00 am a 4:30 pm PST *
* Cerrado en todos los días festivos observados a nivel nacional

Para el uso con válvulas de compensación automáticas nominal de 1.35 GPM (5.11 L/min) o menos.